




HANGING A DOOR

There are several things you can do to make this job go well. First, the door should be fitted to the frame so hinge fitting can be marked exactly on both door and jam. Make sure the door is plumb! If not, the door will swing open or closed by itself.

See Installing Aluminum threshold drawing for details on cutting the bottom of the door.

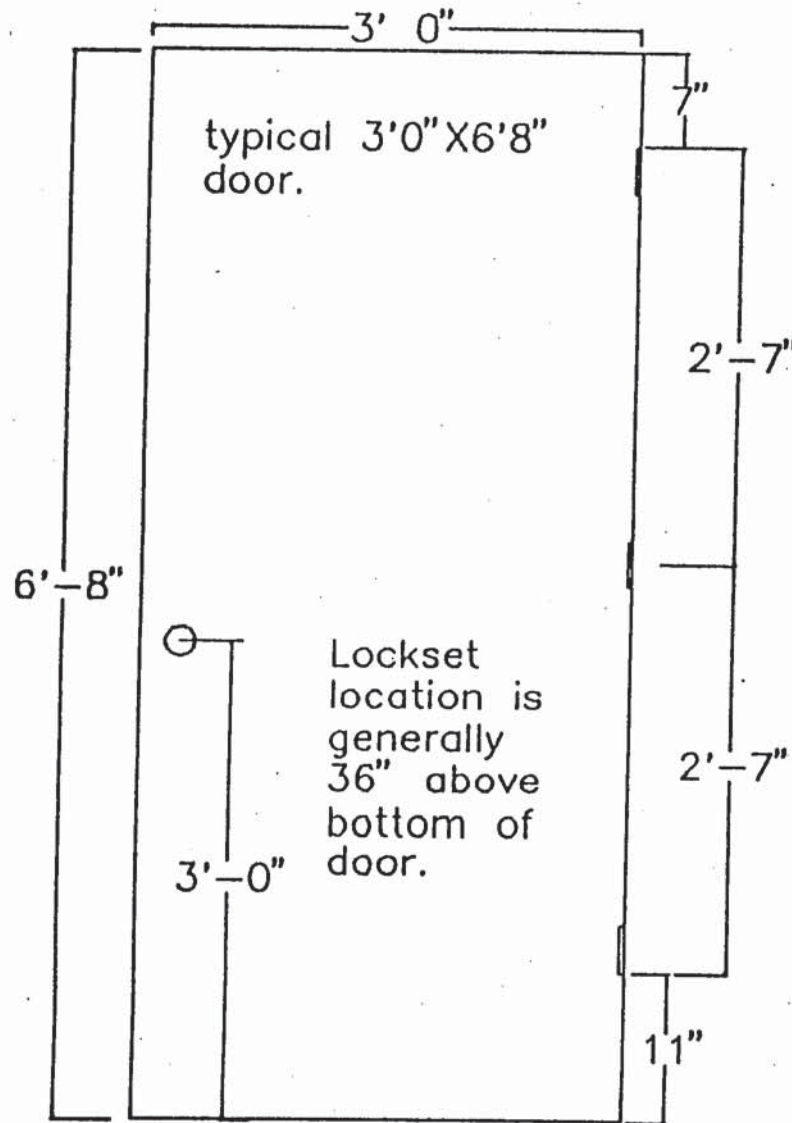

HINGES

Unless specified, the hinges should be installed as shown to the left. The top of the top hinge should be 7" from top of the door. The bottom of the bottom hinge should be 11" from the bottom of the door. If a 3rd hinge is installed, it should be an equal distance between top and bottom hinge.

LOCKSET INSTALLATION

Install 36" above the bottom of door as shown to left. Use paper template with lockset for proper location and drill size.